




# Taboret elektryczny

## MODEL: 773020, 773021



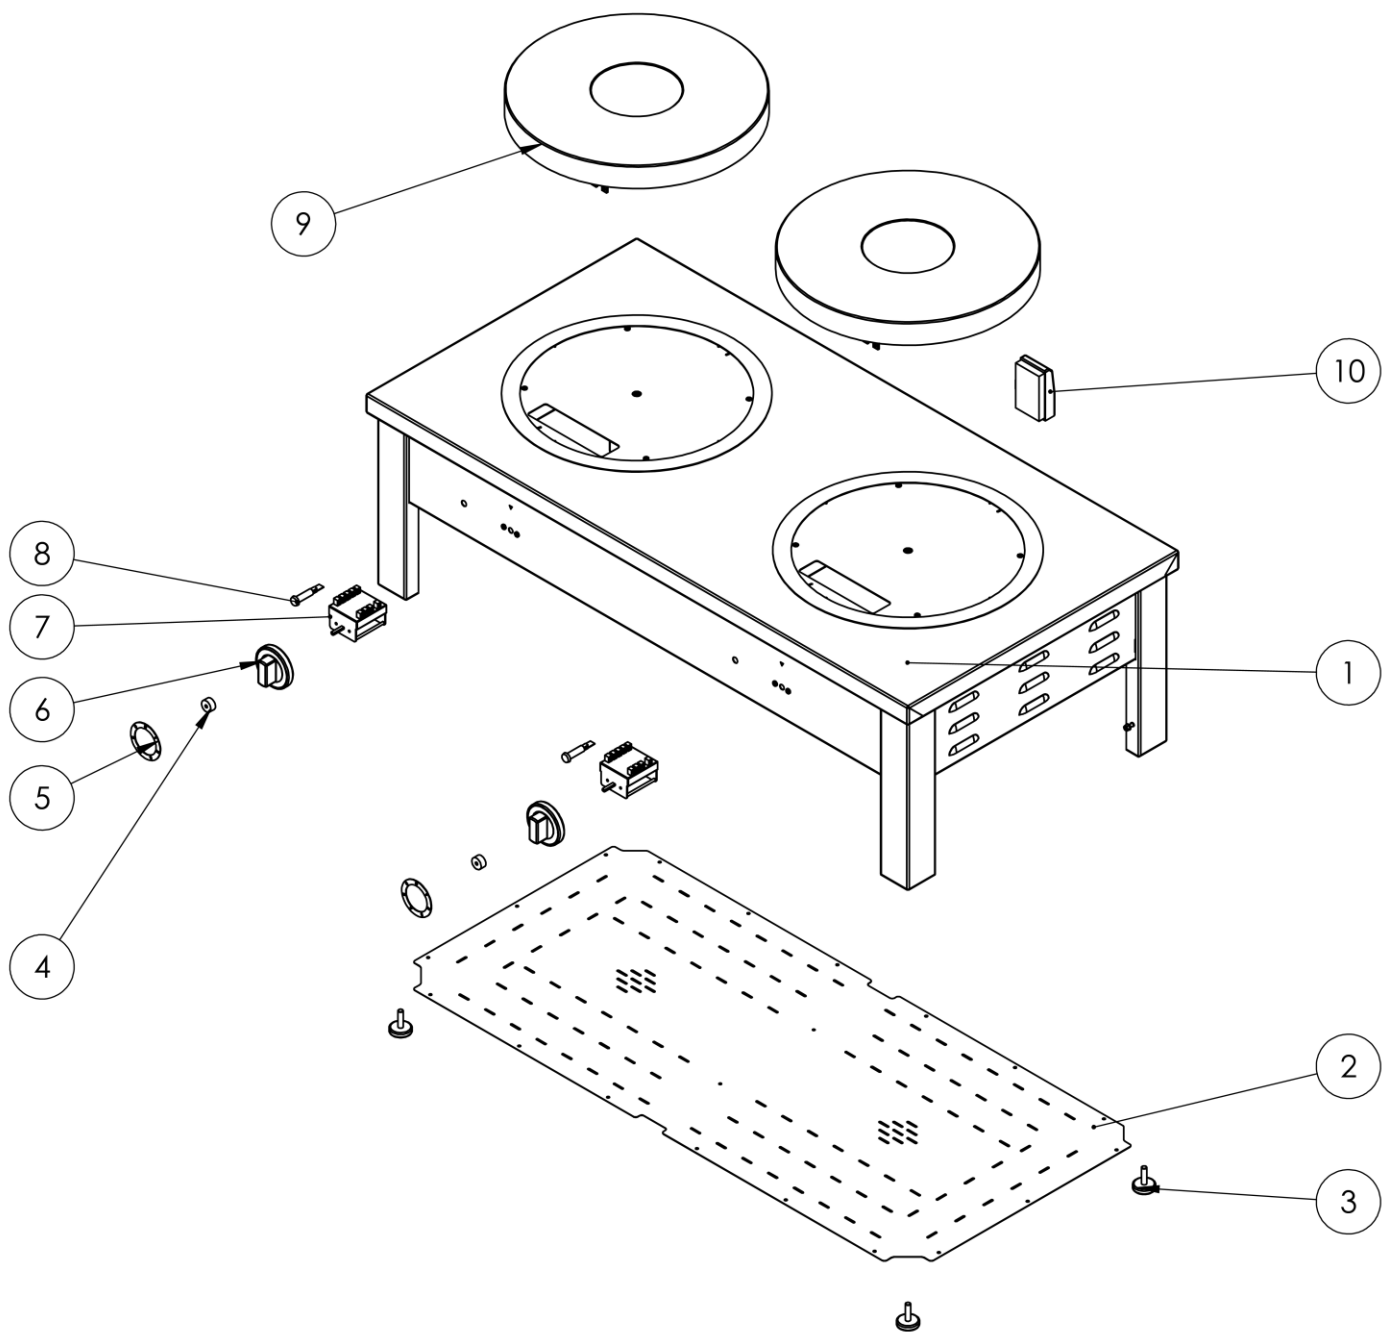

LP.	Numer katalogowy	Numer katalogowy	Nazwa części
1	V773020-01	V773021-01	Korpus
2	V773020-02	V773021-02	Ostona
3	V773020-03	V773021-03	Stopka
4	V773020-04	V773021-04	Adapter pokrętła
5	V773020-05	V773021-05	Skala pokrętła
6	V773020-06	V773021-06	Pokrętło bez adaptera
7	V773020-07	V773021-07	Przełącznik
8	V773020-08	V773021-08	Lampka syg. pomarańczowa
9	V773020-09	V773021-09	Płyta grzejna
10	V773020-10	V773021-10	Skrzynka zaciskowa